



## **TKT Engineering Inc.**

5858 179 Street  
Surrey, BC  
Canada V3S 4J9  
Tel. 604-880-1705  
Fax. 604-648-8012  
[www.thinkerf.com](http://www.thinkerf.com)

### **Re. Printing to USB or Network printer from SawSel running in Windows XP.**

SawSel prints by default to LPT1.

These are the steps:

1. Open the Properties form for your USB printer. Click the tab labeled "Ports".
2. Near the bottom of the page, check "Enable Printer Pooling"
3. In the list of ports, check "LPT1:". (The USB printer should also still be selected.)
4. Press Apply at the bottom of the form  
The name of the printer next to LPT1 should now be the same as for the USB printer.
5. Close the Printer Properties form